

**Tone Control**  
Press to access Bass, Treble, Balance and Fader Control.  
Press  $\text{---}+$ ,  $\text{---}+$  to decrease/increase bass and treble.  
Press  $\text{<B>}$  or  $\text{^FV}$  to change balance and fader.

**ON/OFF**  
Press to turn radio on or off.

**Volume Control**  
Press  $\text{---/+}$  for decrease/increase

**Source and Preset Indicator**

**Program Indicator**

**CD Slot**  
Insert CD to play.

**CD Eject Button**

**Source Selector**  
Double click (push twice, fast) then press repeatedly until desired source, AM, FM, CD or Changer appears. Press only once to return to previous source.

**Signal Seek Switch**  
Seek: Press  $\text{^}$  or  $\text{v}$  to select next or previous station on radio or title on CD.  
Scan: Press and hold  $\text{^}$  for two seconds to scan radio stations or music titles on CD.

**Multifunction Keys**  
**Radio:** To set 8 AM and 24 FM stations tune to desired station, press and hold for two seconds. In function mode also used for Autostore, Manual Tuning and Numeric Frequency Selection.  
**CD-Changer:** Press number 1 through 6 to select any one of the CD's in the magazine.  
**\* Function Button:** Press to access Autostore, Manual Tuning, Numeric Frequency Selection and CD menu.  
**TP Traffic Program Selector:** Press to find the next RDS coded FM station with traffic program.

**Traffic Program Indicator**

**Removable Display**  
For added protection against theft remove the display unit by pressing the button to the right of the signal seek switch. To operate radio again push display into its place.  
See Main Operation Guide in your Glove Box for many more features.  
\* CD Changer functions require optional Porsche CD Changer.